

ATTENZIONE!

Togliere la corrente prima di eseguire qualsiasi collegamento elettrico o sostituire le lampadine.

- 1) Fissare a soffitto il supporto **A**, eseguire il collegamento elettrico alla linea di alimentazione.
- 2) Infilare nella tige **A** i tre pezzi della montatura **B** e bloccarla serrando adeguatamente la rondella e il dado **C**. Avvitare nella tige il tubetto **E** e fissarlo con il dado previsto.
- 3) Avvitare le lampadine e fissare prima le foglie del giro superiore **1** serrandole con le borchie dorate **D** e successivamente le foglie del giro inferiore **2**.
- 4) Infilare il fondino **3** regolando la quota con la rondella interna **F** e fissarlo al tubetto **E** avvitando il finalino **4**.



WARNING!

Switch off the current before connecting or relamping.

- 1) Hook the support **A** to the ceiling, and make the electric connection to power line supply.
- 2) Mount canopy, tube and arms **B** over stem and secure it with washers and lock nut **C**, then screw nipple **E** into end of stem with proper nut.
- 3) Screw the bulbs and first attach the upper glass leaves **1**, then the lower glass leaves **2** to fixture arms with studs **D**.
- 4) Insert the glass **3**, adjusting his position with washer **F**, screw the final **4**.




(USA) WARNING!

Switch off the current before connecting or relamping.

RISK OF FIRE AND ELECTRIC SHOCK. THIS PRODUCT IS TO BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY.

DO NOT ATTACH TO OUTLET BOX, FIXTURE OVER 50 POUNDS.

- 1) Fasten the support **A** over the outlet box, and make the electric connection to power line supply (see circuit diagram).
- 2) Mount canopy, tube and fixture arms **B** over stem and secure it with washers and lock nut **C**, then screw nipple **E** into end of stem with proper nut.
- 3) Screw the bulbs and first attach the upper glass leaves **1**, then the lower glass leaves **2** to fixture arms with studs **D**.
- 4) Insert the glass **3**, adjusting his position with washer **F**, screw the final **4**.

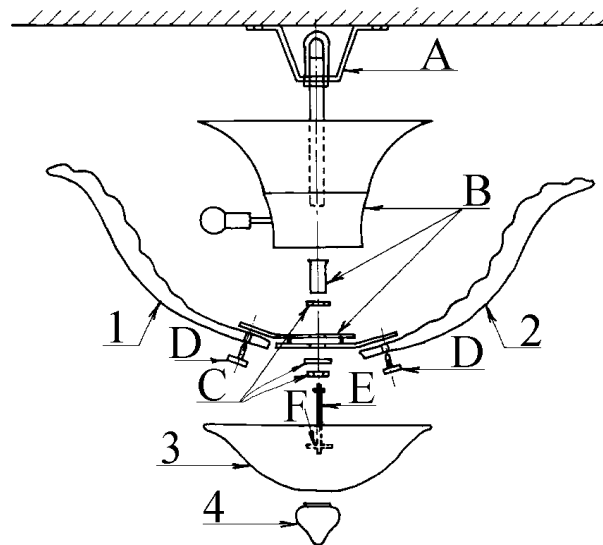

Nota:

Bloccare in modo sicuro il dado con la rondella antisvitamento **C** in modo che non si allenti applicando un momento torcente non superiore a 5,0 Nm.

Il dado con rondella per il bloccaggio del tubetto **E** non deve allentarsi applicando un momento torcente non superiore a 2,5 Nm.

Remark:

Washer and nut **C** shall be securely attached in such a way it will not be possible to loosen locked connections by attempting with a torque not exceeding 5,0 Nm.

Washer and nut of stem **E** shall not loosen locked connections by attempting with a torque not exceeding 2,5 Nm.

EXCELSIOR

Plafoniere decorativa/Decorative Ceiling Lamp

- ☐ 5363/CR
- ☐ 5363/GR
- ☐ 5363/OR
- ☐ 5363/VR

Altezza/height 38cm – 15”
Ø/diameter 70cm – 27”½
Peso/weight 22Kg – 49lbs

- ☐ 100 - 120V 50Hz ~ 60Hz
- ☐ 220- 240V

N° 6 x max 60W

- ☐ E14
- ☐ E12(candelabra base)

Cl. I

