

I) ATTENZIONE!

Togliere la corrente prima di eseguire qualsiasi collegamento elettrico o sostituire le lampadine.

- 1) Fissare a soffitto la piastra e la tige **A**, infilare il rosone **B** ed eseguire il collegamento della linea di alimentazione elettrica al morsetto.
- 2) Alzare il rosone **B** con la piastra **C** fino al soffitto, infilare la rondella **D** e fissare con il dado **E**.
- 3) Infilare il distanziatore **F**, la piastra **G**, la rondella **H** e fissare con il dado **I**.
- 4) Fissare il perno **L** con rondella e dado alla tige **A**.
- 5) Avvitare le lampadine.
- 6) Eseguire il montaggio delle foglie **1** (livello superiore), poi le foglie **2** (livello inferiore)
- 7) Montare tutti i listelli in vetro **3** sulla piastra **G** prefissandole con le borchie
- 8) Ora bloccare le borchie alla piastra **G**
- 9) Infilare il fondino in vetro sostenendolo con la rondella **N** e regolarne l'altezza mediante la rondella **M**.
- 10) Completare il montaggio avvitando il finalino **4**.

1


(USA) WARNING!

Switch off the current before connecting or relamping.

RISK OF FIRE AND ELECTRIC SHOCK. THIS PRODUCT IS TO BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY.

- 1) Fasten mounting bracket with stem **A** to ceiling, insert canopy and connect ground supply wire to ground (yellow/green) fixture wire then Black to line (Black) and White to line (White) with wire nut.(see circuit diagram)
- 2) Slip canopy **B** with plate **C** to ceiling, insert washer **D** and fasten by nut **E**.
- 3) Insert spacing collar **F**, plate **G**, washer **H** then fasten by nut **I**.
- 4) Fix the pin **L** with washer and nut to tige **A**.
- 5) Screw the bulbs.
- 6) Mount glass leaves **1** (upper level), then the glass leaves **2** (lower level).
- 7) Mount all the leaves **3** without tightening the studs following the numbers
- 8) Only after that lock the studs
- 9) Insert the glass cup holding it by washer **N** and adjust the height by washer **M**.
- 10) Finish the assembling screwing the glass finial **4**.

1

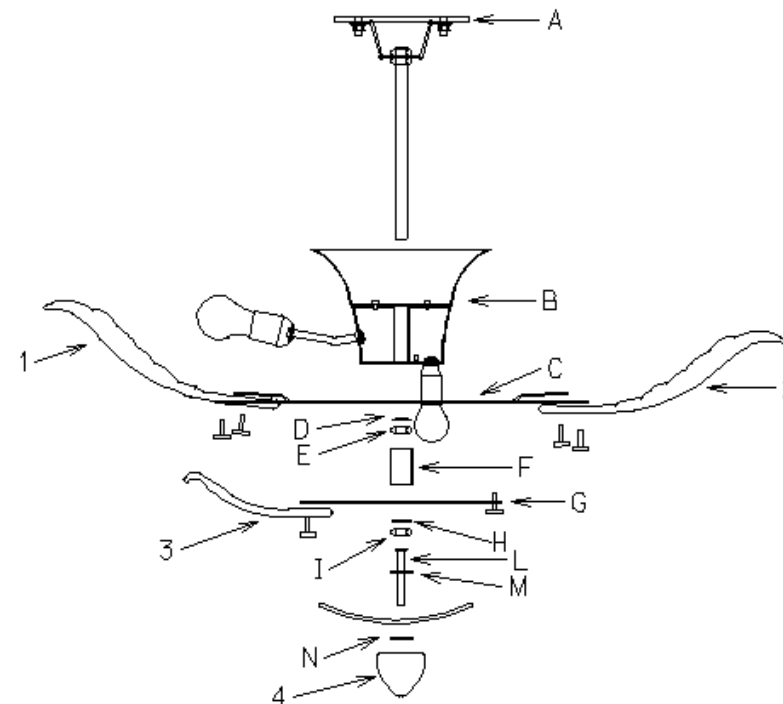

r 5426/CR
r 5426/OR
r 5426/GR

Ceiling lamp **EXCELSIOR**

h. cm 36 – 14 1/2”
Ø. cm 105 – 41”
Kg. ~ 54 – 119 lb
r 110-120V
50Hz~60Hz
8 x max 40W
r E26
3 x max 40W
r E12
CL.I.

