


(I) **ATTENZIONE!**

Togliere la corrente prima di eseguire qualsiasi collegamento elettrico o sostituire le lampadine.

- 1) Fissare a soffitto il supporto **A** ed infilare il pezzo **B** facendo passare i cavi della linea elettrica attraverso l'apposito foro, quindi fissare il pezzo **B** con le proprie viti.
- 2) Infilare il supporto **C** fissandolo con il dado **D** ed effettuare il collegamento alla linea elettrica di alimentazione.
- 3) Fissare le foglie **1** e poi le foglie **2** con le borchie **E**.
- 4) Infilare e fissare il disco **F** con la rondella ed il dado **G**, quindi fissare i pezzi **3** con le borchie **E**.
- 5) Infilare la coppa **4** sostenendola con la rondella **H** quindi infilare il pezzo **5**.

U

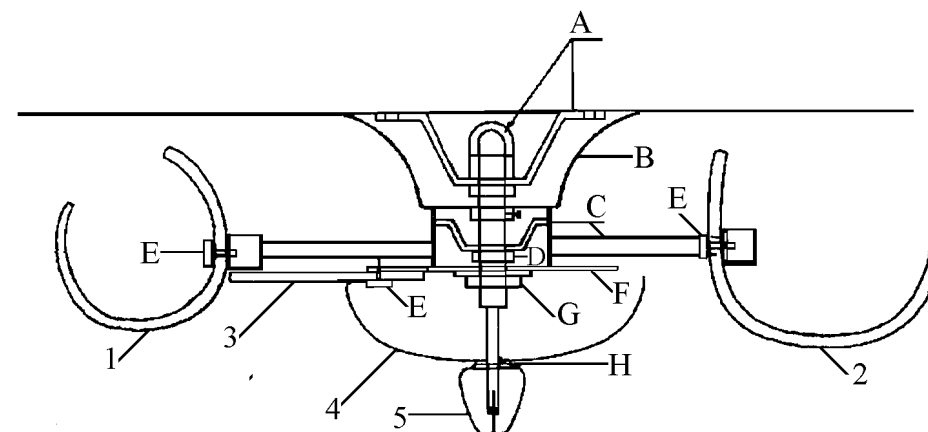

(USA) **WARNING!**

Switch off the current before connecting or relamping.

RISK OF FIRE AND ELECTRIC SHOCK. THIS PRODUCT IS TO BE INSTALLED BY A QUALIFIED ELECTRICIAN ONLY.

DO NOT ATTACH TO OUTLET BOX, FIXTURE OVER 50 POUNDS.

- 1) Fix the support **A** to the ceiling. Connect ground supply wire to ground (yellow/green) fixture wires, then black wire to line (black) and White wire to white with wire nuts.
- 2) Insert the piece **B**, then fasten it by the proper screws.
- 3) Insert the support **C** and fasten it by the nut **D**; then make the electrical connection to the main feed line.
- 4) Fasten the leaves **1** and then the leaves **2** by the studs **E**.
- 5) Insert the disk **F** with the washer and the nut **G**; then fasten the piece **3** with the stud **E**.
- 6) Slip the glass cup **4** and fasten it with the washer **H**; then screw the piece **5**.

Plafoniera **REX**

p 5431/CR **p** 5431/OR
p 5431/GR
p 5431/VR
p 5431/RR

h. 33 cm.
Æ 100 cm.
Kg. 54
p 120V **p** 240V
50Hz~60Hz

N° 13 x max 40W

p E14 **p** E17 **p** E12 (candelabra base)

Cl. I

